


Step by Step Installation Instructions for Installing your Turn@bout®

You will need the following tools for installation

- Power Drill
- Tape Measure
- Pencil



Installation Kit Includes: Turn@bout®, drill bits, hex wrench and template for drilling holes.

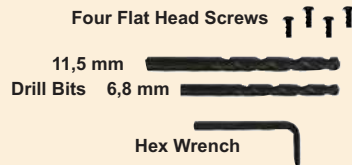

Step 1: Measure & Mark


Raise pallet jack to full height.

Measure X from back of pallet jack, and mark both forks.

X = length of fork times 0,43

Examples for X for different fork length

900 mm = 387 mm, 1000 mm = 430 mm, 1150 mm = 495 mm


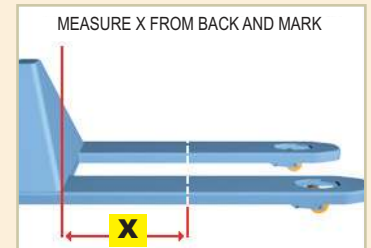


Step 2: Attach Template

Align side of template with mark as shown.

Place template flat on top of fork and

slide to outside edge.

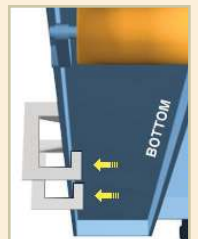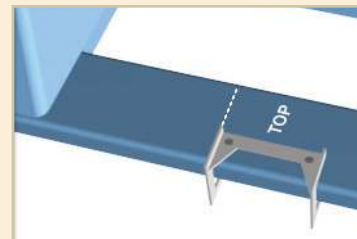

Step 3: Drill Holes

Hold template firmly in place.


Drill pilot hole with the smaller drill bit.

Temporarily drop-in one screw to help keep template in place.

Drill second pilot hole.

Remove Template.

Then use the larger drill bit to enlarge the holes to countersink the screw.

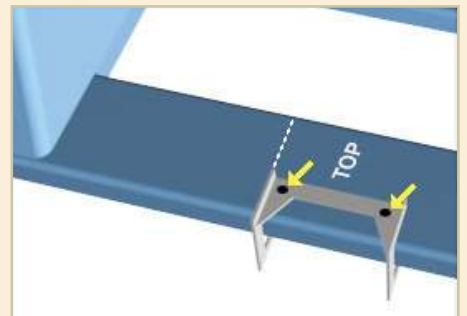


Step 4: Install

Place Turn@bout® as shown and install screws.

Press up on rear of the Turn@bout® to make sure that it is straight and moves freely.


Repeat all steps for other side/fork.

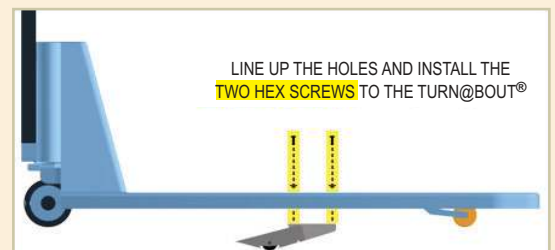

Installation Complete

Place Turn@bout® labels onto handle of pallet jack.

You are done! Enjoy the increased maneuverability by 72%. And no more wide turns or having to kick or wrestle the pallet jack into position.

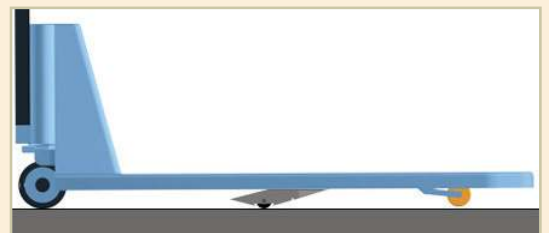

Visit www.turnabout.eu for photos and more information