

1. Drive the forks all the way into the fork tunnels.



2. Spread the forks outward so that the forks clamp.




3. Tighten the built-in fork locking for safe handling.




4. You can now lift the tilting skip for emptying.




5. Drive carefully towards the edge of the container you are emptying into. Lower the tilting skip over the edge.

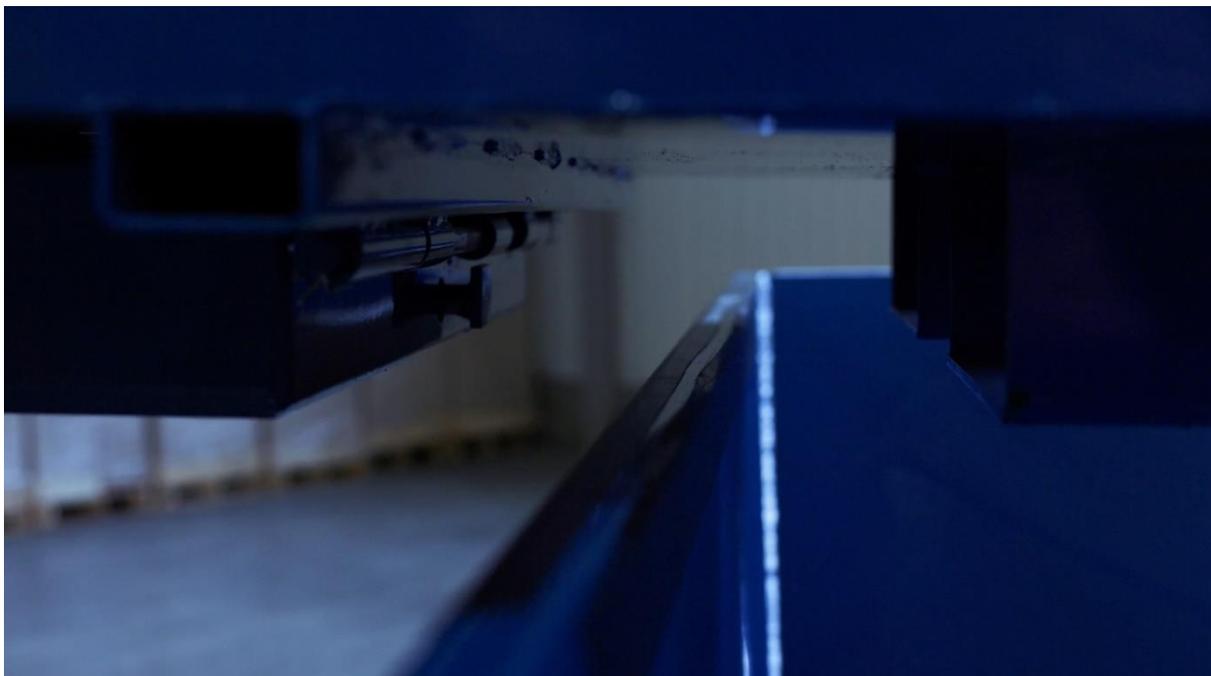

6. Drive the automatic emptying plate towards the edge of the container or use the manual emptying lever on the side to tilt/empty the skip.

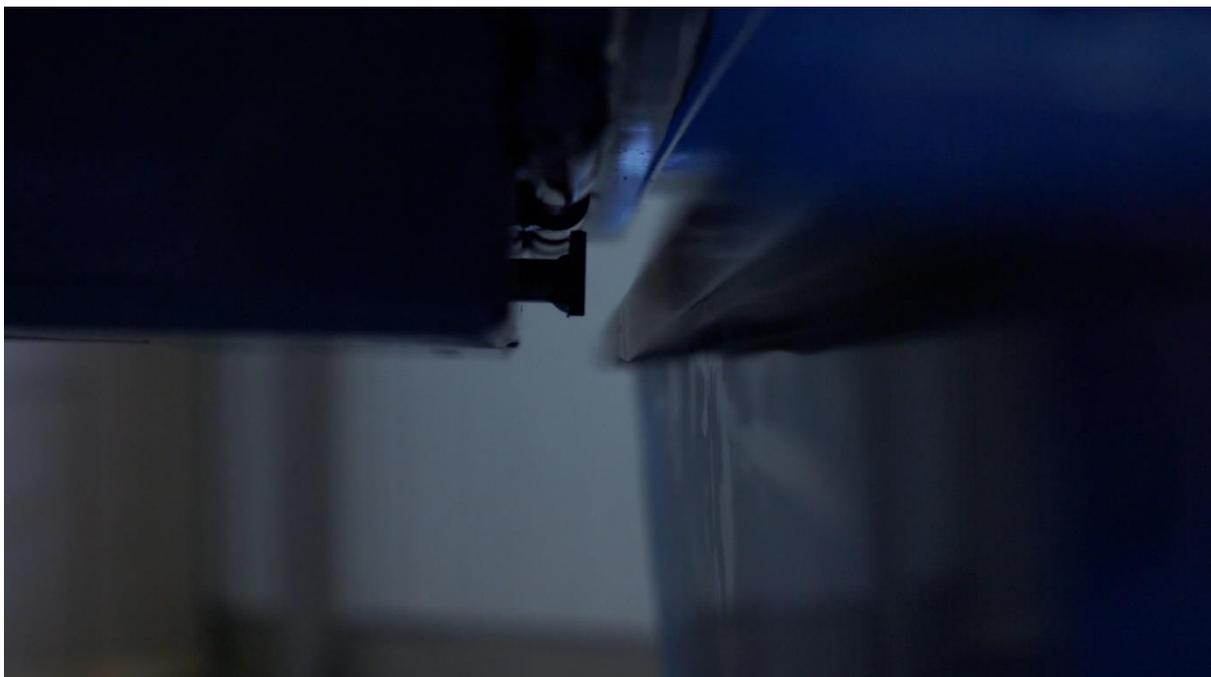


7. Empty the skip.

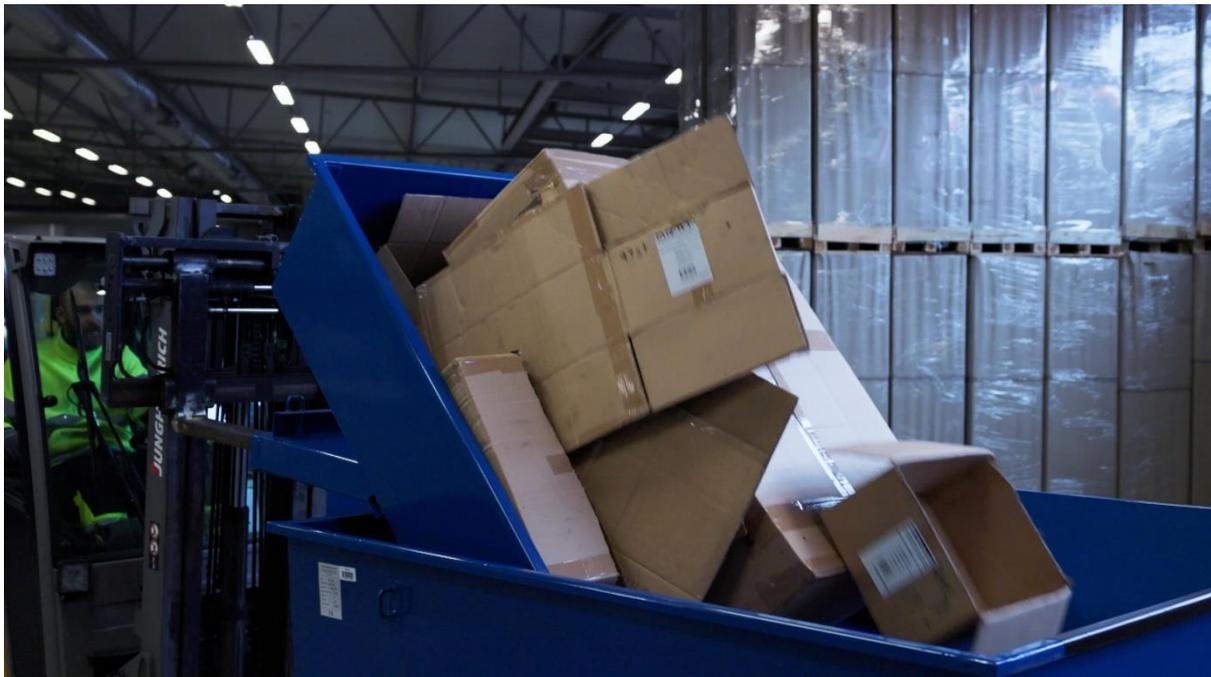

8. Lift it up to get all the garbage out of the bin if needed.



9. When empty, lift it back and lower it to the ground while slowly driving backwards so that the bin tilts back on the undercarriage again.

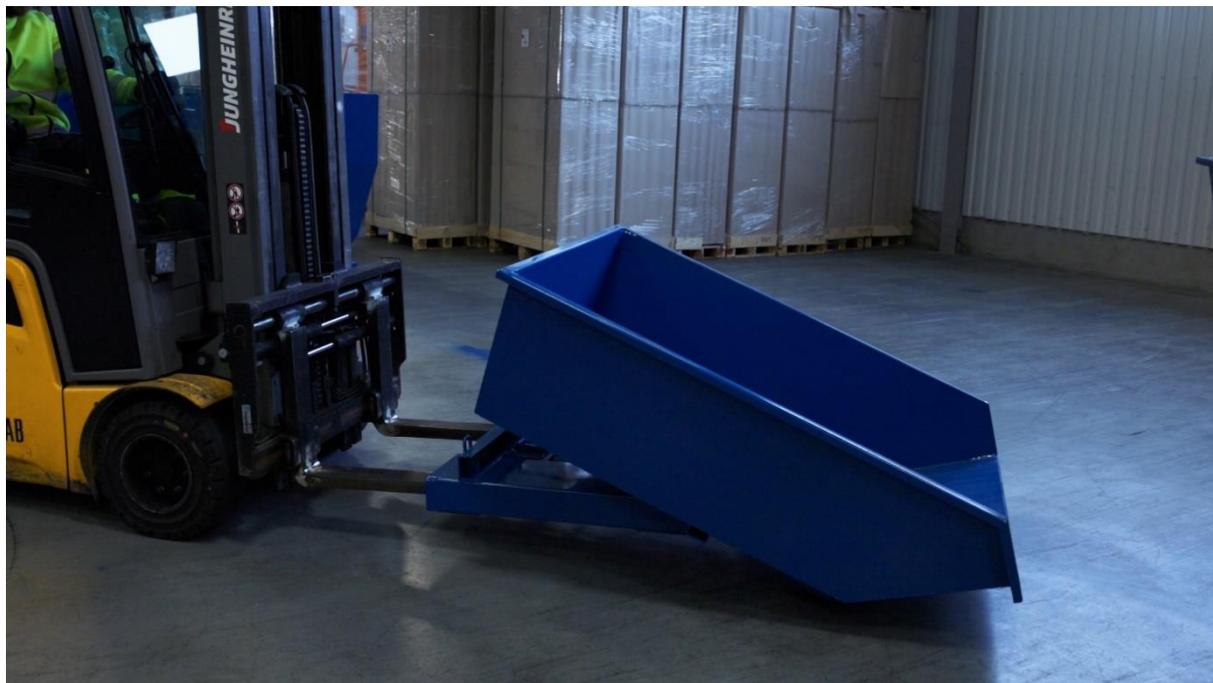

10. Make sure you hear a clicking sound and check that the bin is securely back on the undercarriage again before you fill it up with garbage again.

